
SPORTENZIA

FITTING GUIDE

SET OF 2 PAIRS OF NO-TIE LACES WITH ROTARY DIAL

Two pairs of thick cord laces, enough for two pairs of shoes: a rotary dial tightens the whole lacing in one move, a button releases it. No more knots to tie or untie. Fitting, adjustment and care on one page.

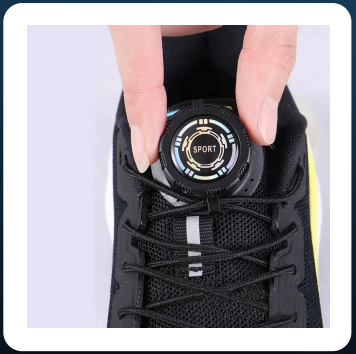

REF. PACK2LACETSPORTNOIRBOA · SPORTS SHOES, TRAINERS, CHILDREN AND ADULTS · 2 PAIRS, 4 DIALS, 4 CAPSULE LOCKS

Before you start

Each lace comes already threaded in its dial; the set fits two pairs of shoes. The dial sits at the top of the lacing, on the tongue; the two strands run down through the eyelets and meet at the bottom in a screw-apart capsule lock. Have scissors ready to trim the excess. Allow ten minutes per shoe the first time.

Fitting the laces

1. **Remove the old laces** and open the shoe wide.
2. **Place the dial** on the tongue, between the two top eyelets, button facing you. Pass each strand through the top eyelet on its side.
3. **Lace from top to bottom** crossing the strands like a regular lace, down to the bottom eyelets. Keep the strands flat, without twists.
4. **Set the length** put the shoe on, dial released, and pull both strands to a comfortable tension, foot held firmly without being squeezed. Trim the excess, leaving a few centimetres on each strand.
5. **Lock the ends** unscrew the capsule lock, push one strand fully into each half, then screw it back tight. Pull: nothing must slip.
6. **Tighten and test** turn the dial to tighten, press its button to release in one go. Walk a few steps, tighten again if needed.



The capsule lock unscrews: one strand in each half.

Specifications

Lace	**Thick cord**	Closure	**Dial and button**
For	**Children, adults**	Shoes	**Sports, trainers**
Contents	**2 pairs, 4 dials, 4 locks**		

GOOD TO KNOW

- Tighten to hold the foot, not to squeeze it: a foot going numb means one notch looser.
- For a child, an adult does the fitting and trimming. Capsule locks are small parts: keep them away from toddlers.
- Wash the laces in soapy water; avoid the washing machine with the dial fitted.
- Frayed lace or a dial that no longer holds: replace them before running or riding.

Need help?

sportenzia.com/pages/contact

Our team answers your questions about fitting and use.

© 2026 Sportenzia. All rights reserved.