SPORTENZIA

USER GUIDE

SILICONE HANDLEBAR MOUNT FOR GPS WATCHES

A silicone collar that opens onto the handlebar and an arch that the watch strap passes through: the GPS watch becomes a bike computer. Fitting, locking, adjustment, removal and care.

REF. SUP11 · BARS OF 31.1 TO 32.5 MM · SILICONE, NO SCREWS OR TOOLS



01 · FITTING

CONTENTS, COMPATIBILITY, MOUNTING

In the box

- The silicone mount, in one piece: a split collar that opens to go over the bar, and an arch that the watch strap slides through.
- Cable ties, depending on the batch: passed through the slots of the collar, they lock it onto the bar.

What it takes

A round handlebar of **31.1 to 32.5 mm** in diameter, on a mountain bike, road bike, BMX or child's bike. On the watch side, the GPS sports watches with a classic strap from the brands listed on page 2: the strap goes through the arch and buckles as it does on your wrist.

Fitting in five moves

1. **Open the collar** at its split and push it onto the bar, near the stem, on a smooth section, arch upwards. The silicone hugs the tube: a little force is normal.
2. **Aim the arch** so that the screen faces you from the saddle, then lock the collar: one cable tie through each pair of slots, pulled tight, excess cut flush.
3. **Pass the strap** of the watch under the arch, buckle open, watch on top. Close the buckle and tighten one notch more than on your wrist: the strap must not slide.
4. **Shake the assembly** while stationary: neither the collar on the bar nor the watch in the arch should move. If they do, tighten the strap or the ties.
5. **Start the activity** on the watch before setting off, in a cycling profile: the data stays readable at a glance, without turning your wrist.

Specifications

Handlebar	**31.1 to 32.5 mm across**	Dimensions	**79.8 x 40 mm**
Material	**Silicone and plastic**	Mounting	**Split collar, no screws**
Use	**MTB, road, BMX, kids' bikes**	Contents	**1 mount, built-in attachment**

BEFORE RIDING

- Check the hold while stationary by shaking the mount, then the watch. A badly closed buckle opens again on the first bump.
- Do not handle the watch while riding: set the screen and start the activity while stopped, a glance is enough afterwards.
- On the bar, the heart-rate sensor on the back of the watch no longer measures anything: for heart rate, use a paired chest strap.

02 · DAY TO DAY

COMPATIBLE WATCHES, ADJUSTMENTS, CARE

Compatible watches

BRAND	MODELS
Garmin	Forerunner (all series), Approach S1, S3, S4, S5, S6, S10, S20, S60, Fenix 2 to 5X Plus, Epix, Vivoactive and Vivoactive HR
Polar	M200, M400, M430, M600, V800, RCX3, RCX5, A300, A370
Suunto	3, 9, Spartan, Ambit, Ambit3, Traverse, Core, Essential, Kailash
TomTom	Spark, Spark 3, Runner 2, Runner 3, Runner Cardio, Multi-Sport


Model not listed: the mount suits it if the strap passes under the arch and buckles normally.

Adjustments, removal, care

- Screen angle: choose it by turning the collar on the bar before fitting the cable ties. To change it later, cut them and fit new ones.
- Watch too close to the stem: move the collar a few centimetres outwards, the strap then turns freely.
- To take the watch back, open the buckle and slide the strap out of the arch. The mount stays on the bike.
- Wash the silicone in soapy water, no solvent. Sun and cold harden it over the years: a collar split anywhere other than its slot gets replaced.
- In the rain, a watch's touchscreen reacts to drops: lock it, the buttons stay available.

If something goes wrong

SYMPTOM	LIKELY CAUSE	FIX
Mount turns on the bar	Bar thinner than expected, ties missing or loose	Lock it with cable ties, on a smooth section
Strap slides in the arch	Buckle not tight enough, thin strap	Tighten one notch, put the buckle under the bar
No heart rate	Optical sensor away from the wrist	Paired chest strap
Watch hits the stem	Collar too central	Move it outwards

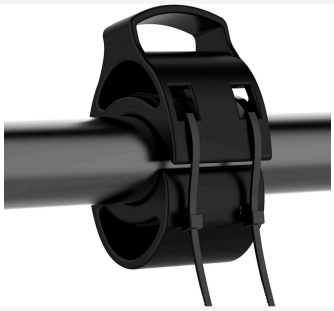

The collar pushed onto the bar and locked by two cable ties passed through its slots.

GOOD TO KNOW

- The mount holds the watch, it does not protect it if the bike falls: on a rough course, keep it on your wrist.
- On a child's bike, an adult fits and checks the mount.
- Stored without the watch, the collar stays in place on the bar: nothing sticks out.

Need help?

sportenzia.com/pages/contact

Our team answers your questions about fitting and compatibility.